


Cayin

CP6便携式CD播放器 简易操作指南

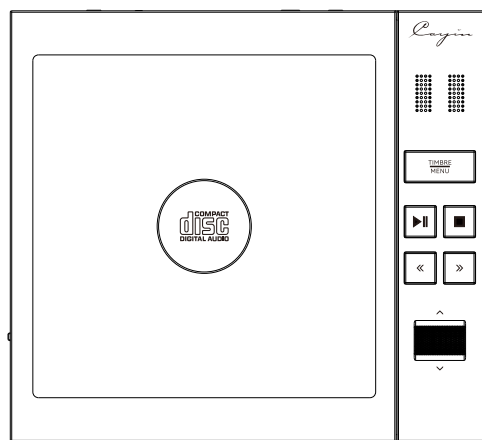

感谢您购买Cayin CP6便携式CD播放器，使用前请仔细阅读本手册，能帮助您尽快掌握本机的基本操作。


包装清单

- 1、CP6便携式CD播放器-----1台
- 2、TYPE-C信号线 -----1条
- 3、简易操作指南 -----1本
- 4、清洁擦拭布 -----1块
- 5、3.5mm圆头转方座光纤转接头-----1个

本机特征


- 1、配置电子防震CD机芯
- 2、多音色模式
- 3、支持DC/BAT供电（功率）模式选择
- 4、支持高低增益选择
- 5、支持PO/LO输出模式选择
- 6、支持蓝牙接收和发射
- 7、支持手机端Cayin Control App遥控(APP仅支持安卓手机)

前面板功能说明

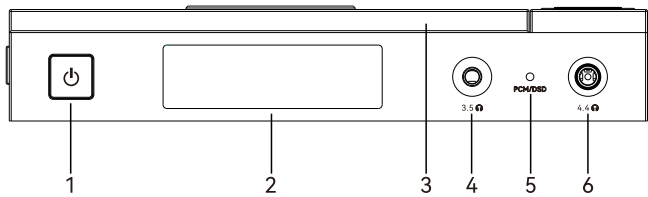

- 1、电源键：长按此键3秒，开机/关机；短按此键，熄屏/亮屏；
- 2、显示屏：显示状态及设置界面
- 3、碟盖
- 4、3.5单端耳机输出
- 5、PCM/DSD格式及采样率指示灯
- 6、4.4平衡耳机输出


顶面与侧面板功能说明

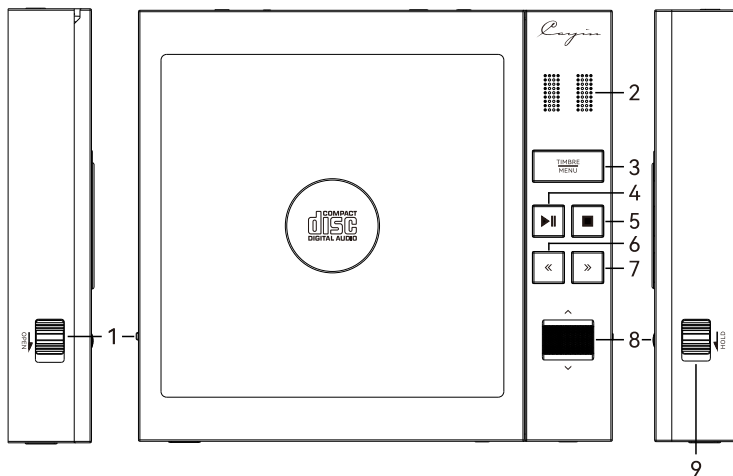

- 1、开仓键
- 2、电子管视窗
- 3、音色/菜单键
- 4、播放/暂停键
- 5、停止键
- 6、上一曲/快退键
- 7、下一曲/快进键
- 8、音量旋钮
- 9、按键锁


注意：按键操作参照基本操作。

底板功能说明

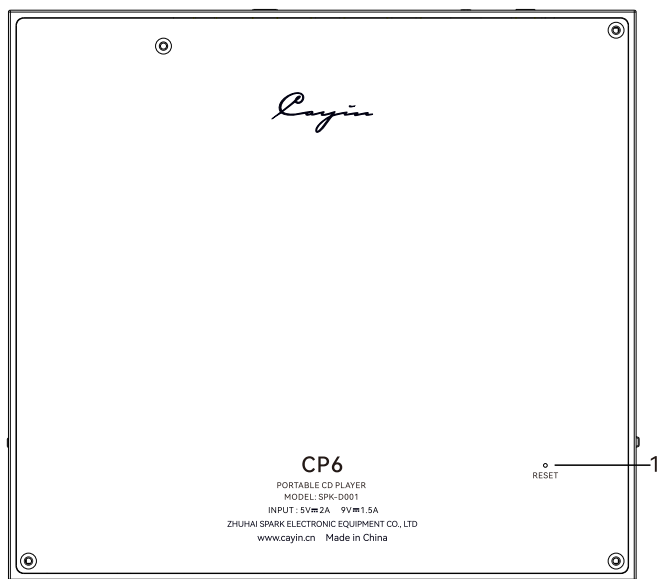

1、复位键

后面板接口功能说明

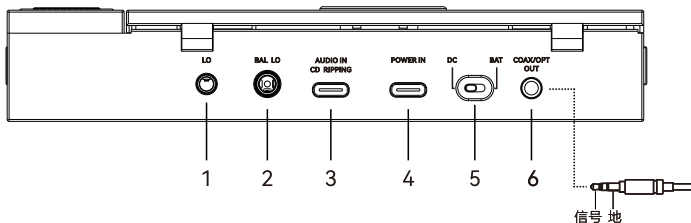

- 1、3.5mm单端线路输出
- 2、4.4mm平衡线路输出
- 3、USB DAC接口/翻录U盘接口
- 4、USB充电接口
- 5、电源模式开关
- 6、3.5mm数字（光纤/同轴）输出接口：此为光纤同轴二合一接口，通过3.5mm插头的光纤线或同轴线可连接外部解码设备。

基本操作

一、开机/关机/熄屏/亮屏

1. 开机: 长按 [⏻] 电源键保持2-3秒，屏幕点亮并进入开机界面。
2. 关机: 长按 [⏻] 电源键2-3秒，关闭整机电源。
3. 熄屏: 在开机状态下，短按 [⏻] 电源键显示屏关闭，再按一次显示屏点亮。

二、开/关碟盖仓门

1. 碟盖关闭情况下，用手指扣住开仓键往OPEN箭头方向滑动，碟盖自动弹起一小段距离，接着用手向上翻盖即可打开上盖仓门，注意开盖角度不能大于60度，然后放入碟片。
2. 碟盖打开情况下，用手护住碟盖轻轻放下，碟片开始转动并读取碟片信息。

注：在打开碟盖前，先按 [■] 键并等待碟片停止转动后再开盖。

三、菜单设置

1. 打开菜单: 在非菜单状态下, 长按音色菜单键 [] 进入菜单设置界面, 可对“Source(音源选择)/Gain(增益)/PCM Filter(数字滤波器)/Balance(声道平衡)/Brightness(屏幕亮度)/Screen Timeout(息屏时间)/Factory Reset(恢复出厂设置)/Amplifier Type(功放类型)/Output mode(输出模式)/UAC(UAC模式选择)进行设置。
2. 切换菜单: 在菜单状态下, 向上滚动音量旋钮可切到上一个菜单, 向下滚动音量可切到下一个菜单。
3. 设置菜单选项: 在菜单状态下, 短按 [<<] 键或 [>>] 键来选择所要设置的选项。
4. 退出菜单: 在菜单状态下, 短/长按音色菜单键 [], 退出菜单设置。

四、按键功能操作

1. 上一曲键 [<<]: 短按为选择上一曲并播放。在播放状态下, 长按为快退功能。
2. 下一曲键 [>>]: 短按为选择下一曲并播放。在播放状态下, 长按为快进功能。
3. 播放及暂停键 []: 短按为播放或暂停功能。
注意: 暂停时仍处于旋转读碟状态, 请不要长时间处于暂停状态, 以免影响寿命。
4. 停止键 []: 在播放或暂停状态, 短按停止键, 进入停止播放状态。
5. 音色菜单键 []: 短按切换二种电子管音色及晶体管音色。长按进入菜单设置或退出菜单设置。
6. 音量旋钮: 向上滚动增加音量, 向下滚动减小音量。在菜单设置中可以通过上下滚动来切换菜单选项。
7. 按键锁: 往箭头方向滑动, 锁定按键功能, 按键无效。

五、输入选择

1. CD输入: 本机默认是CD输入, 打开仓门, 显示屏显示“OPEN”字样, 将光碟印刷面朝上放在光碟仓内。合上仓门, 若能正常读碟, 显示屏显示“READING”字样, 一段时间后显示屏显示总曲目数及总播放时间; 若不能正常读碟, 则显示屏显示“NO DISC”字样。
2. USB DAC输入: 用USB线将电脑或播放器USB口与本 AUDIO IN USB口连接起来, 在菜单的音源选择(Source) 切换到“USB Audio”, 连接电脑后, 将“USB驱动”安装至电脑上 (MAC电脑免安装驱动), 在电脑选择设置对应的声音输出设备即可。

3. 蓝牙输入：在菜单的音源选择(Source) 切换到“Bluetooth”,用其他设备搜索本机蓝牙名称“Cayin CP6”，设备连接好后，音频信号从蓝牙设备进行播放，未连接上任何设备时，显示屏显示“NO CONNECT"字样。未播放任何音频文件时，显示“NO PLAYBACK"字样。

六、充电

将充电器USB线插到机器的“POWER IN”接口，充电时显示屏显示电池充电图标。

七、供电模式切换

“BAT”档位：机器由内部电池供电

“DC”档位：机器由外部直流电源独立供电（仅对 POWER USB 接口连接外部电源时有效，否则机器由内部电池供电）

八、CD翻录

在机器后板上的“CD RIPPING”接口上插入一个Type-C接口的U盘。

在播放状态下，长按 [] 键进入菜单，选择到“CD RIPPING”选项，把选项设置由“off”设置为“extract”，进入翻录状态，录制结束后，碟片停止转动。

在翻录状态下，长按 [] 键进入菜单，选择到“CD RIPPING”选项，把选项设置由“extract”设置为“off”，退出翻录。

九、重启设备

翻到底面，使用卡针往“RESET"小孔里短按一下，设备将重新启动，用于死机等异常情况。

产品规格

基本产品资料			
DAC	CS4308P x2	电源输入	5V  2A/9V  1.5A
支持碟片	12cm的CD/CD-R碟片	电池规格	3.85V 7300mAh (28Wh)
机身净重	约 720 g	外形尺寸	167 x 151 x 29mm
蓝牙版本	V5.4	电子管	JAN6418 x2

续航及充电时间

输出模式	耳放模式	音色模式	续航时间
3.5mm PO	CLASS AB	晶体管	~7.5小时
		电子管现代	~6.7小时
		电子管经典	~6.6小时
	CLASS A	晶体管	~6.5小时
		电子管现代	~5.9小时
		电子管经典	~5.8小时
4.4mm PO	CLASS AB	晶体管	~6.6小时
		电子管现代	~6.0小时
		电子管经典	~5.9小时
	CLASS A	晶体管	~5.6小时
		电子管现代	~5.2小时
		电子管经典	~5.1小时
3.5mm LO	— —	晶体管	~10.2小时
		电子管现代	~8.6小时
		电子管经典	~8.5小时
4.4mm LO	— —	晶体管	~9.8小时
		电子管现代	~8.4小时
		电子管经典	~8.2小时

续航及充电时间

充电时间	--	标准充电模式	~3.5小时
	--	快充模式（QC3.0/PD2.0）	~2.5小时

续航测试条件：BAT供电，播放CD音乐唱片，32Ω (PO)/47kΩ (LO) 负载，低增益，音量30。

技术参数

3.5mm PO输出			
参数名称	晶体管音色	电子管Classic音色	电子管Modern音色
输出功率	测试条件：32Ω负载，高增益，1kHz，THD+N≤0.5%		
	330mW+330mW (BAT) 420mW+420mW (DC)	330mW+330mW (BAT) 420mW+420mW (DC)	330mW+330mW (BAT) 420mW+420mW (DC)
	测试条件：16Ω负载，高增益，1kHz，THD+N≤0.5%		
	500mW+500mW (BAT) 600mW+600mW (DC)	500mW+500mW (BAT) 600mW+600mW (DC)	500mW+500mW (BAT) 600mW+600mW (DC)
频率响应 (±2dB, Fs=192k Hz)	20Hz-47kHz	20Hz-45kHz	20Hz-46kHz
总谐波失真+噪声 (1kHz, Fs=192k Hz, A计 权, 20Hz- 20kHz, Output: 1.0V)	≤0.002%	≤0.5%	≤0.4%

动态范围 (1kHz, A计权, 20Hz- 20kHz	≥108dB	≥102dB	≥102dB
信噪比 (1kHz, A计权, 20Hz- 20kHz	≥108dB	≥102dB	≥102dB
通道隔离度 (RL=32Ω , 1kHz, A计权)	≥75dB	≥70dB	≥70dB
增益控制	高增益：0dB / 低增益：-6dB (菜单可选)		
输出阻抗	0.6Ω		
4.4mm PO输出			
参数名称	晶体管音色	电子管Classic音色	电子管Modern音色
输出功率	测试条件：32Ω负载，高增益，1kHz，THD+N≤0.5%		
	900mW+900mW (BAT) 1100mW+1100mW (DC)	900mW+900mW (BAT) 1100mW+1100mW (DC)	900mW+900mW (BAT) 1100mW+1100mW (DC)
	测试条件：16Ω负载，高增益，1kHz，THD+N≤0.5%		
	1100mW+1100mW (BAT) 1300mW+1300mW (DC)	1100mW+1100mW (BAT) 1300mW+1300mW (DC)	1100mW+1100mW (BAT) 1300mW+1300mW (DC)

频率响应 ($\pm 2\text{dB}$, $F_s=192\text{k}$ Hz)	20Hz-45kHz	20Hz-40kHz	20Hz-44kHz
总谐波失真+噪声 (1kHz, $F_s=192\text{k}$ Hz, A计权, 20Hz-20kHz, Output: 1.0V)	$\leq 0.002\%$	$\leq 0.5\%$	$\leq 0.4\%$
动态范围 (1kHz, A计权, 20Hz-20kHz)	$\geq 119\text{dB}$	$\geq 104\text{dB}$	$\geq 104\text{dB}$
信噪比 (1kHz, A计权, 20Hz-20kHz)	$\geq 119\text{dB}$	$\geq 104\text{dB}$	$\geq 104\text{dB}$
通道隔离度 ($R_L=32\Omega$, 1kHz, A计权)	$\geq 115\text{dB}$	$\geq 104\text{dB}$	$\geq 97\text{dB}$
增益控制	高增益: 0dB / 低增益: -6dB (菜单可选)		
输出阻抗	1.2 Ω		


数字音频输入/输出		
USB Audio In	工作模式	UAC2.0/1.0（菜单可选）
	Windows	Windows 10及以上需安装Cayin USB Audio Driver驱动程序
	MAC OSx	免安装驱动
	Android	免安装驱动
	iOS	免安装驱动
	音频规格 (UAC2.0)	PCM: 16-32Bit, 44.1kHz-384kHz DSD: Native DSD64-256, DoP64-256
Bluetooth RX/TX	Rx接收编码格式	LDAC、aptX Adaptive、aptX HD、aptX、AAC、SBC
	Tx发射编码格式	aptX Adaptive、aptX HD、aptX、SBC
	蓝牙版本	Bluetooth® 5.4
S/PDIF Out	音频规格	16-24Bit, 44.1kHz-192kHz
	输出接口	3.5mm 插座（跟光纤发射头共用）

安全注意事项

1. 不可自行开启本机进行维修、拆卸或改造。
2. 请不要在特别热、冷、多尘或潮湿的环境中使用本产品，地方。也不要放在有液体的
3. 充电时机器有轻微发热，属正常现象。
4. 使用时不要让产品摔落，或与硬物摩擦撞击，否则会导致播放器表面磨花，电池脱落，数据丢失或其它硬件损坏，不要剧烈震动或撞击，防止不正确使用而损伤本产品。
5. 请调节适当音量欣赏音乐，以免损伤您的听觉和音响系统，在插入耳机前，请先将音量调小，不要长时间使用耳机。
6. 不要使用化学剂或清洁剂清洁本产品，这样会损伤产品表面和腐蚀喷漆。
7. USB只用于数据传输或者充电，请尽量避免边充电边使用。
8. 当长期没有使用产品时，需要对产品定期充电，以保证电池寿命。电池更换不当会有爆炸危险，只能用同类型或等效类型的电池。电池不得暴露在诸如日照、火烤或类似过热环境中。
9. 若需使用电源适配器供电/充电，请选择符合安全标准要求并取得相关安全认证的电源适配器。
10. 于本装置中使用的镭射光束对眼睛有害，请勿打开机箱，只有专业人员方可维修。本机的镭射元件能产生超过1级限度的镭射。

Cayin

Cayin CP6 CD Player Instruction Manual

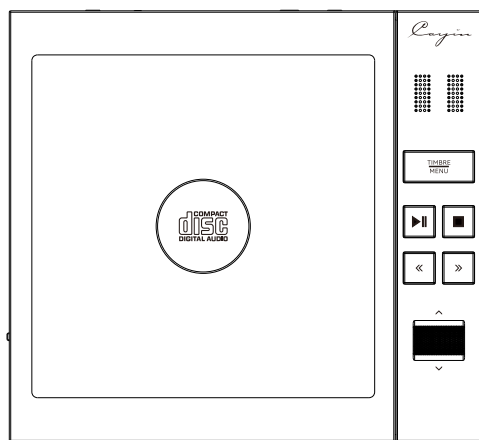

We sincerely thank you for choosing CP6 CD Player. We have prepared this user manual to help you understand the features and familiarize with the operation. We recommend all customers read through this manual prior to using the device.


Package Contents

- 1.CP6 CD Player ×1
- 2.3.5mm Optical Adapter (Mini-TOSLINK to Standard) ×1
- 3.USB Type-C Cable ×1
- 4.User Manual ×1
- 5.Cleaning Cloth ×1

Key Features


- 1.Built-in anti-shock system for stable playback
- 2.Multiple timbre to suit different listening preferences
- 3.Selectable DC or battery power modes
- 4.High and low gain settings for different headphones
- 5.Switchable PO / LO output modes
- 6.Supports both Bluetooth receiving and transmitting
- 7.Compatible with the Cayin Control App for remote operation
(App available for Android devices only)

Front Panel Overview

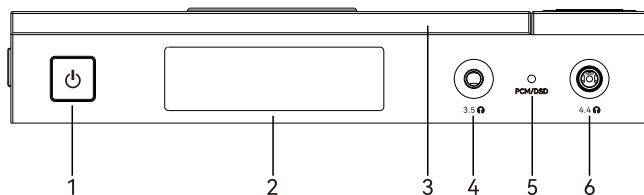


1. Power Button: Press and hold for 3 seconds to power on/off;
Press briefly to turn the screen on or off.
2. Display: Shows playback status and system settings.
3. Disc Lid
4. 3.5mm Single-Ended Headphone Output
5. PCM / DSD Indicator: Indicates the current audio format.
6. 4.4mm Balanced Headphone Output

Top & Side Panel Overview

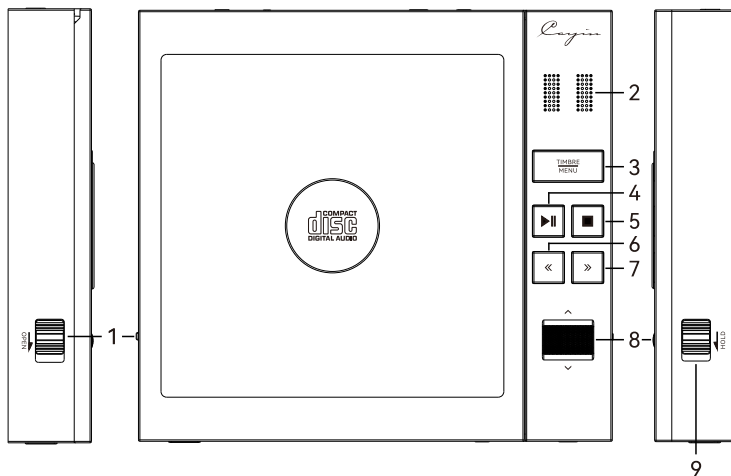


1. Lid Open Button
2. Tube Window
3. Timbre / Menu Button
4. Play / Pause Button
5. Stop Button: Refer to the Basic Operation section for button instructions.
6. Previous / Rewind Button
7. Next / Fast Forward Button
8. Volume Knob
9. Key Lock

Bottom Panel Over

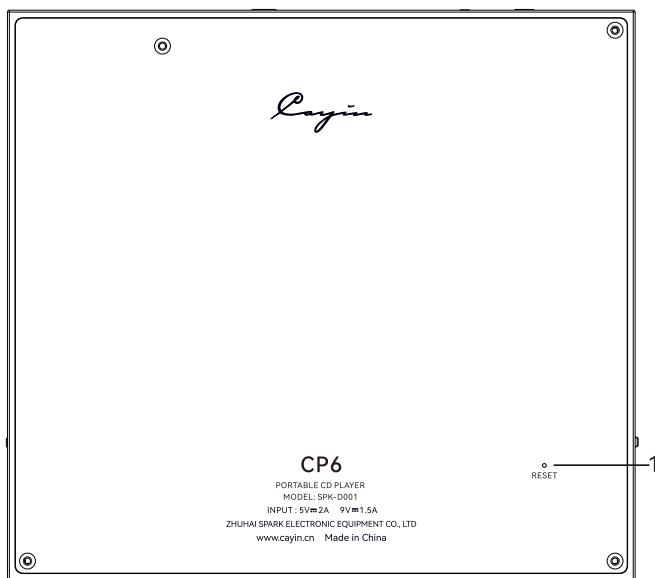

1、RESET

Rear Panel Overview

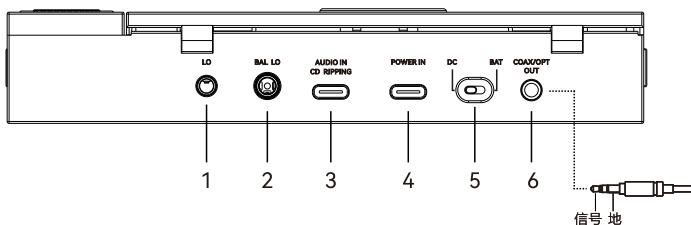

1. 3.5mm Single-Ended Line Out

2. 4mm Balanced Line Out

3. USB DAC / CD Ripping (USB Flash Drive) Port

4. Charging Port

5. Power Mode Switch

6. 3.5mm Digital Output (Optical / Coaxial): A combined optical and coaxial output. Connect to an external DAC using a 3.5mm optical (mini-TOSLINK) or coaxial cable.

Basic Operation

1. Power On / Off & Screen Control

1. Power On: Press and hold the [Power] button for 2–3 seconds. The screen will light up and the device will enter the startup interface.

2. Power Off: Press and hold the [Power] button for 2–3 seconds to turn off the device.

3. Screen On / Off: When the device is powered on, press the [Power] button briefly to turn the screen off; Press it again to wake the screen.

2. Opening / Closing the Disc Lid

1. Opening the Disc Lid: When the lid is closed, slide the [Lid Open] button in the direction of the arrow.

The lid will pop up slightly—then lift it gently to fully open.

Note: Do not open the lid beyond a 60° angle.

Insert the disc after opening.

2. Closing the Disc Lid: Gently lower the lid by hand. The disc will begin to spin and the device will read the disc information.

Note:

Before opening the lid, press the [Stop] button and wait until the disc has completely stopped spinning.

3. Menu Settings

1. Enter the Menu: In normal (non-menu) mode, press and hold the [Timbre / Menu] button to enter the settings menu.

The following options are available: Source, Gain, PCM Filter, Balance, Brightness, Screen Timeout, Factory Reset, Amplifier Type, Output Mode, UAC.

2. Navigate the Menu: In menu mode, rotate the volume knob upward to move to the previous item, or downward to move to the next item.

3. Adjust Settings: In menu mode, press the [Previous] or [Next] button to select and adjust the desired option.

4. Exit the Menu: In menu mode, press or press and hold the [Timbre / Menu] button to exit the menu.

4. Button Functions

1. Previous: Press briefly to play the previous track;
During playback, press and hold to rewind.
2. Next: Press briefly to play the next track;
During playback, press and hold to fast forward.
3. Play / Pause: Press briefly to play or pause.
Note: In pause mode, the disc continues spinning. Avoid leaving the device paused for extended periods to prevent unnecessary wear.
4. Stop: Press briefly during playback or pause to stop playback.
5. Imbre / Menu: Press briefly to switch between tube (Classic / Modern) and solid-state timbre;
Press and hold to enter or exit the settings menu.
6. Volume Knob: Rotate upward to increase volume, and downward to decrease volume;
In menu mode, rotate to navigate through menu options.
7. Key Lock: Slide in the direction of the arrow to lock all buttons;
When activated, all button operations are disabled.

5. Source Selection

1. CD Mode: CD is the default input mode. Open the disc lid and the display will show "OPEN";
Place the disc into the tray with the label side facing up. Close the lid—if the disc is read successfully, the display will show "READING", followed by the total number of tracks and total playback time; If the disc cannot be read, the display will show "NO DISC".

2. **USB DAC Mode;** Connect the device to a computer or player via USB cable to the AUDIO IN (USB) port.

In the menu, set Source to “USB Audio”.

Install the USB driver on your computer (not required for macOS).

Then select this device as the audio output in your system settings.

3. **Bluetooth Mode:**In the system menu, set Source to “Bluetooth”.

On your Bluetooth source device (e.g. smartphone or player), search for “Cayin CP6” and connect.

Once connected, the unit will receive and decode audio from the Bluetooth device.

When no device is connected, the display shows “NO CONNECT”.

When no audio is playing, the display shows “NO PLAYBACK”.

6. Charging

Connect the USB cable from the charger to the “POWER IN” port of the device.

During charging, a battery icon will be displayed on the screen.

7. Power Mode Selection

1. **“BAT” Mode:**The device is powered by the internal battery.

2. **“DC” Mode**

The device is powered by an external DC supply via the POWER USB port.

If no external power is connected, the device will automatically use the internal battery.

8. CD Ripping

Insert a USB flash drive with a Type-C interface into the “CD RIPPING” port on the rear panel.

1. Start Ripping

During playback, press and hold the [Timbre/Menu] button to enter the menu.

Navigate to “CD RIPPING”, then change the setting from “Off” to “Extract” to start ripping.

Once the process is complete, the disc will stop spinning.

2. Stop Ripping

During ripping, press and hold the [Timbre/Menu] button to enter the menu again.

Navigate to “CD RIPPING”, then change the setting from “Extract” to “Off” to stop ripping.

Specifications General

Basic Product Information			
DAC	CS4308P x2	Power Input (USB)	DC 5V / 2A or 9V / 1.5A
Supported Disc Format	12cmCD/CD-R	Battery	3.85V 7300mAh (28Wh)
Net Weight	Approx720 g	Dimensions	167 x 151 x 29mm
Bluetooth Version	V5.4	Tube	JAN6418 x2

Charging and Battery Life

Output mode	Amplifier Type	Timbre	Battery Life
3.5mm PO	CLASS AB	Solid-State	~7.5Hr
		Modern Tube	~6.7Hr
		Classic Tube	~6.6Hr
	CLASS A	Solid-State	~6.5Hr
		Modern Tube	~5.9Hr
		Classic Tube	~5.8Hr
4.4mm PO	CLASS AB	Solid-State	~6.6Hr
		Modern Tube	~6.0Hr
		Classic Tube	~5.9Hr
	CLASS A	Solid-State	~5.6Hr
		Modern Tube	~5.2Hr
		Classic Tube	~5.1Hr
3.5mm LO	--	Solid-State	~10.2Hr
		Modern Tube	~8.6Hr
		Classic Tube	~8.5Hr
4.4mm LO	--	Solid-State	~9.8Hr
		Modern Tube	~8.4Hr
		Classic Tube	~8.2Hr

Charging and Battery Life

Charging Time	--	Standard Charger	~3.5Hr
	--	Fast Charger (QC3.0/PD2.0)	~2.5Hr

Battery life test conditions: Battery Powered, Playing CD music discs, low gain, volume at 30, 32Ω (PO)/47kΩ (LO) IEMs

Basic Specifications

3.5mm Single-ended Headphone Output			
Data Parameter	Solid-State	Classic Tube	Modern Tube
Output Power	Test Condition: 32Ωload, high gain, 1kHz, THD+N≤0.5%		
	330mW+330mW (BAT) 420mW+420mW (DC)	330mW+330mW (BAT) 420mW+420mW (DC)	330mW+330mW (BAT) 420mW+420mW (DC)
	Test Condition: 16Ωload, high gain, 1kHz, THD+N≤0.5%		
	500mW+500mW (BAT) 600mW+600mW (DC)	500mW+500mW (BAT) 600mW+600mW (DC)	500mW+500mW (BAT) 600mW+600mW (DC)
Frequency Response (±2dB, Fs=192kHz)	20Hz-47kHz	20Hz-45kHz	20Hz-46kHz
THD+N (1kHz, Fs=192kHz, A-weighted 20Hz20kHz, Output: 1.0V)	≤0.002%	≤0.5%	≤0.4%

Dynamic Range (1kHz, A-weighted, 20Hz-20kHz)	≥108dB	≥102dB	≥102dB
SNR (1kHz, A-weighted 20Hz-20kHz)	≥108dB	≥102dB	≥102dB
Channel Separation (RL=32Ω, 1kHz, A-weighted)	≥75dB	≥70dB	≥70dB
Gain	H: 0dB / L: -6dB (Selectable from the menu)		
Output Impedance	0.6Ω		
4.4 mm Balanced Headphone Output			
Data Parameter	Solid-State	Classic Tube	Modern Tube
Output Power	Test Condition: 32Ωload, high gain, 1kHz, THD+N≤0.5%		
	900mW+900mW (BAT) 1100mW+1100mW (DC)	900mW+900mW (BAT) 1100mW+1100mW (DC)	900mW+900mW (BAT) 1100mW+1100mW (DC)
	Test Condition: 16Ωload, high gain, 1kHz, THD+N≤0.5%		
	1100mW+1100mW (BAT) 1300mW+1300mW (DC)	1100mW+1100mW (BAT) 1300mW+1300mW (DC)	1100mW+1100mW (BAT) 1300mW+1300mW (DC)

Frequency Response ($\pm 2\text{dB}$, $F_s=192\text{kHz}$)	20Hz-45kHz	20Hz-40kHz	20Hz-44kHz
THD+N (1kHz, $F_s=192\text{kHz}$, A-weighted, 20Hz-20kHz, Output: 1.0V)	$\leq 0.002\%$	$\leq 0.5\%$	$\leq 0.4\%$
Dynamic Range (1kHz, A-weighted, 20Hz-20kHz)	$\geq 119\text{dB}$	$\geq 104\text{dB}$	$\geq 104\text{dB}$
SNR (1kHz, A-weighted, 20Hz-20kHz)	$\geq 119\text{dB}$	$\geq 104\text{dB}$	$\geq 104\text{dB}$
Channel Separation ($R_L=32\Omega$, 1kHz, A-weighted)	$\geq 115\text{dB}$	$\geq 104\text{dB}$	$\geq 97\text{dB}$
Gain	H: 0dB / L: -6dB (Selectable from the menu)		
Output Impedance	1.2 Ω		

Digital Audio I/O		
USB Audio In	Operating mode	UAC2.0/1.0 (Selectable from the menu)
	Windows	Cayin USB Audio Driver is required for Windows 10 and above
	MAC OSx	Driver-free
	Android	Driver-free
	iOS	Driver-free
	Audio Spec (UAC2.0)	PCM: 16-32Bit, 44.1kHz-384kHz DSD: Native DSD64-256, DoP64-256
Bluetooth RX/TX	RX Supported Codecs	LDAC, aptX Adaptive, aptX HD, aptX, AAC, SBC
	TX Supported Codecs	aptX Adaptive, aptX HD, aptX, SBC
	Bluetooth Version	Bluetooth® 5.4
S/PDIF Out	Audio Spec	16-24Bit, 44.1kHz-192kHz
	Output Interface	3.5mm jack (shared with optical fiber transmitter)

Safety Precautions

1. Do not open, disassemble, modify or attempt to repair the device yourself.
2. Do not use the product in extremely hot, cold, dusty or humid environments.
3. Slight heat generation during charging is normal.
4. Avoid dropping the device or subjecting it to impact, friction or strong vibration. Improper use may cause surface damage, battery issues, data loss or hardware failure.
5. Use an appropriate volume level to protect your hearing and audio equipment. Reduce the volume before connecting headphones, and avoid prolonged listening at high volume.
6. Do not use chemicals or cleaning agents to clean the device, as they may damage the surface or corrode the finish.
7. The USB port is intended for data transfer or charging only. Avoid using the device while charging whenever possible.
8. If the device is not used for an extended period, recharge it periodically to maintain battery health. Improper battery replacement may cause an explosion. Replace only with the same or equivalent type. Do not expose the battery to excessive heat such as direct sunlight, fire or similar conditions.
9. When using a power adapter for charging or power supply, ensure it meets safety standards and is properly certified.
10. The laser used in this device may be harmful to the eyes. Do not open the enclosure. Servicing should be performed by qualified personnel only. The laser component in this device may emit radiation exceeding Class 1 limits.

保修卡

尊敬的顾客，您好！

承蒙惠顾凯音音响产品，谨致谢意！为保障您的权益，请您在购机后仔细阅读以下内容：

一，下列情况不属于免费保修范围，但可提供有偿服务，

敬请注意：

1. 未按使用说明书要求安装、使用、维护、保管导致产品故障或损坏；
2. 擅自涂改、撕毁产品序列号或条码贴纸；
3. 已经超出包换保修期限；
4. 产品保修卡上的产品序列号或型号与产品本身不符；
5. 未经许可，擅自拆机修理，改装或修改原机软件；
6. 因意外因素或人为行为导致的产品损坏，如使用不合适的电源、信号源及高温、进水、机械破坏、摔坏等等；
7. 客户发回返修途中由于运输、装卸所导致的故障或损坏；
8. 其他非产品设计、技术、制造、质量等原因而导致的故障或损坏。

二，售后服务承诺：

1. 在免费包换期间，产品经过本公司检测，确认故障后，可更换相同型号的产品，更换的瑕疵件归本公司所有；
2. 经本公司包换、保修过的产品将享受原始承诺质保的剩余期限再加3个月的质保期；
3. 如产品为付费维修，同一性能问题将享受自修复之日起3个月止的免费保修，请索取并保留好您的维修凭证；
4. 保修期内返修产品的邮寄费用由发送方单向负责；
5. 经销商向您做出的超出本公司保修条款范围的其它承诺，本公司不承担任何责任。

三，保修期：

保修品类		保修期限
主机（不含电子管）		自购买日起，7天内包退， 15天内包换，以上需外观无 损伤，12个月内保修
其他	不可拆卸电池	12个月内保修
	电源适配器	6个月内保修
	电子管	6个月内保修
	线材，遥控器	6个月内保修
	包装材料	不保修
	其他附件	不保修

四，服务支持：

在您送修产品之前，请致电400-600-0712联系本公司售后服务人员以确定产品故障，您也可以通过访问本公司网站www.cayin.cn或发送电子邮件给本公司售后服务部，寻求服务支持。

五，产品保修卡内容的最终解释权及修改权归珠海斯巴克电子设备有限公司。



维修记录

序号	送修日期	故障现象	处理结果
1			
2			
3			
4			
5			
6			

请妥善保管产品保修卡及购买发票并于维修时提供查阅。
上述单据无经销商公章无效。

珠海斯巴克电子设备有限公司

电话：0756-3828711

传真：0756-3828722

邮箱：market@cayin.cn

网址：http://www.cayin.cn

地址：广东省珠海市联港工业区联发路9号

邮编：519045



产品保修卡

产 品 型 号 : _____

产 品 序 列 号 : _____

购 买 日 期 : _____

用 户 姓 名 : _____

经销商 (盖章) : _____

用 户 电 话 : _____

用 户 地 址 : _____

电 子 邮 件 : _____

客服热线 : 400-600-0712

欢迎扫描二维码访问：



官网



微信号



新浪微博



Facebook



Cayin 凯音售后

珠海斯巴克电子设备有限公司

www.cayin.cn

电话：0756-3828711 传真：0756-3828722 E-mail：market@cayin.cn

地址：广东省珠海市联港工业区联发路9号

邮编：519045

重要说明： 为珠海斯巴克电子设备有限公司注册商标！购买是请认清此标志，提防假冒！

V1.0_20260428